



© 2011 KidKraft, LP





 





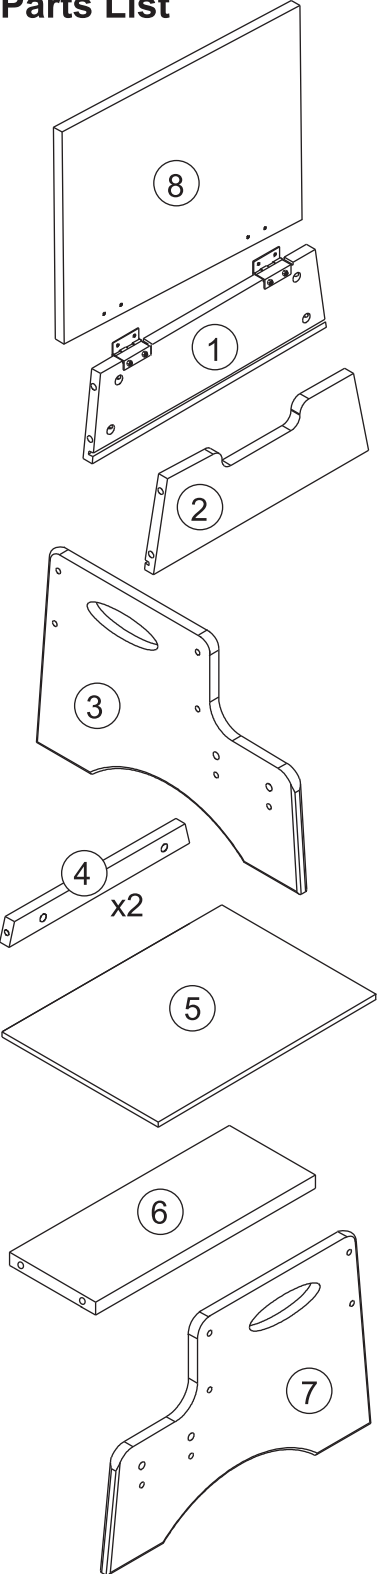
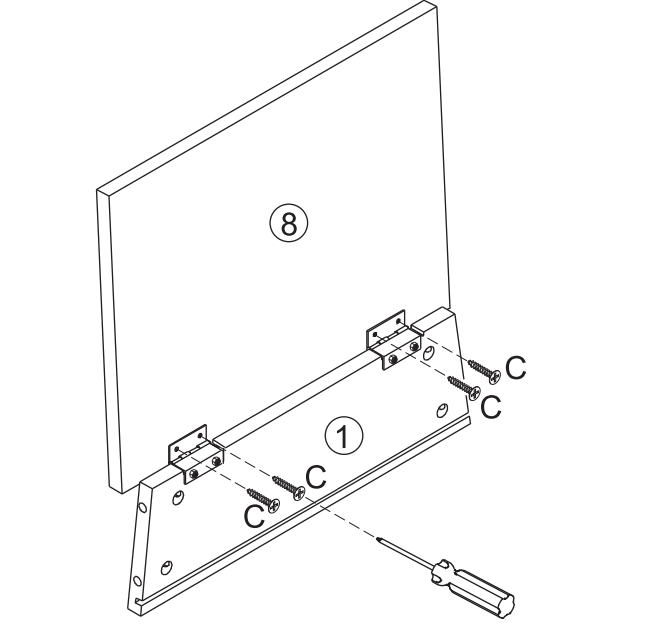
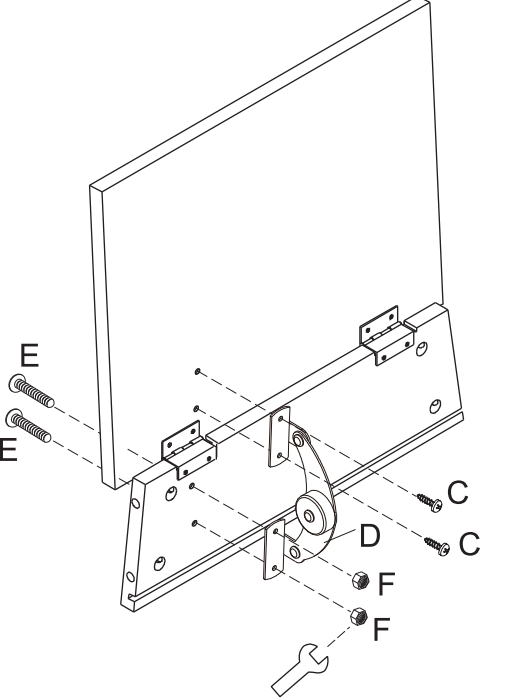
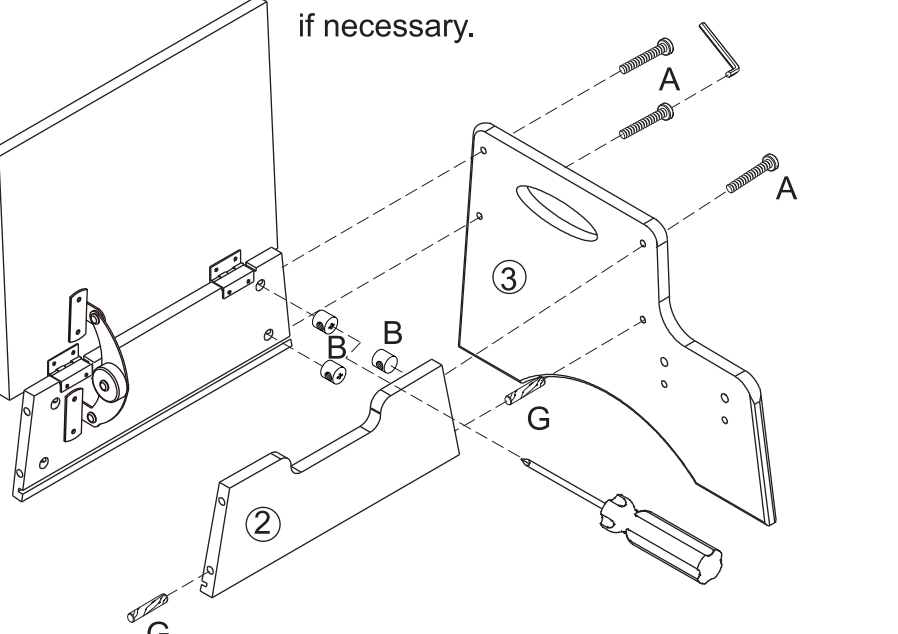
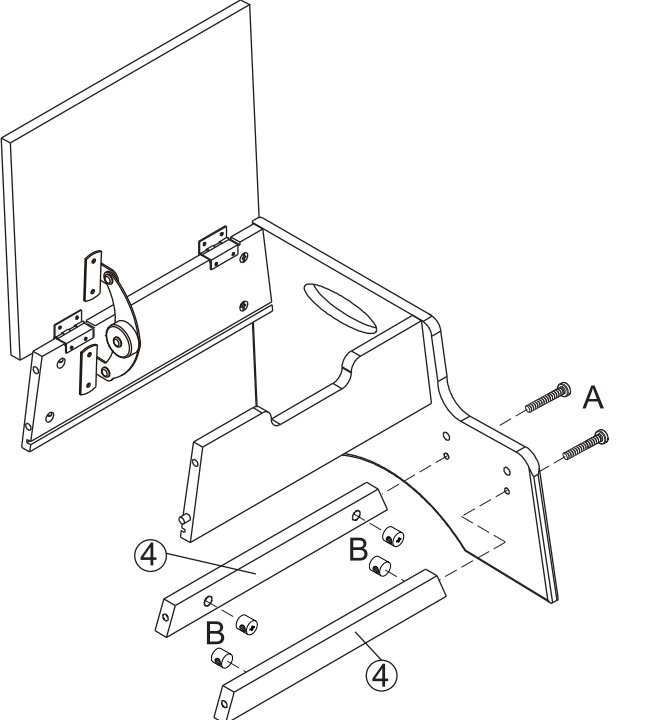
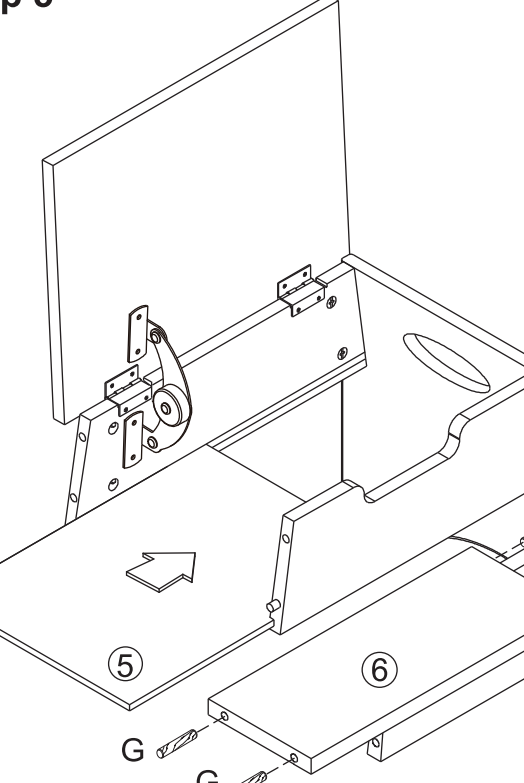
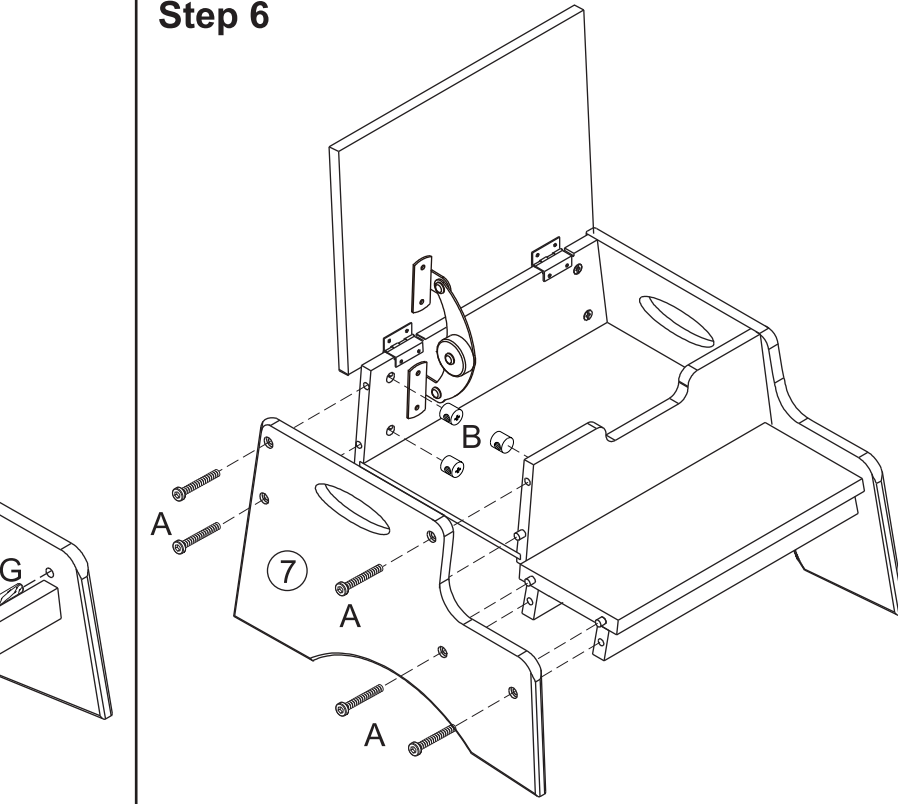
Please retain this information for future reference

# Step 'N Store

## Assembly Instructions

Item # 15601D, 15602D, 15603D, 15611E,  
15633D, 15634E, 15653C

To order replacement parts, please visit [www.kidkraft.com](http://www.kidkraft.com)

HARDWARE	Parts List	Step 1	Step 2	Step 3
<p><b>A . Cross Dowel Bolt</b> x 10 pieces  1 1/4 in / 32 mm</p> <p><b>B . Cross Dowel Nut</b> x 10 pieces </p> <p><b>C. Screw</b> x 6 pcs  1/2 in / 12 mm</p> <p><b>D. Lid Support</b> x 1 pc </p> <p><b>E. Bolt</b> x 2 pcs  7/8 in / 22 mm</p> <p><b>F. Nylon Lock Nut</b> x 2 pcs </p> <p><b>G. Wood Dowel</b> x 6 pcs </p> <p>Wrench x 1 pc </p> <p>Allen Wrench x 1 pc </p> <p>The following tool (not included) is required for assembly: </p> <p>Phillips® Screwdriver</p>				<p>Helpful Hint: Check all predrilled holes for excess sawdust and clean out the holes with a flathead screwdriver if necessary.</p> 
				

**⚠ CAUTION:**  
ADULT ASSEMBLY REQUIRED. Hardware contains small screws with sharp points. Keep unassembled parts out of the reach of small children.

**USE AND MAINTENANCE:**  
-Use on level surfaces only  
-Please check assembly at regular intervals, and frequently tighten hardware if necessary. If maintenance is not carried out, the product could cease to function properly.

**⚠ WARNING:**  
CHOKING HAZARD. Small parts and sharp points, not suitable for children under 3 years.

Before calling customer service, please locate the batch code number (example: 2693/65006/04) found on the bottom or back of your product.

**Customer Service**  
**1-800-933-0771**  
**[www.kidkraft.com](http://www.kidkraft.com)**